



CITY

60163



LEGO.com/city

1



2

 
 


3



4




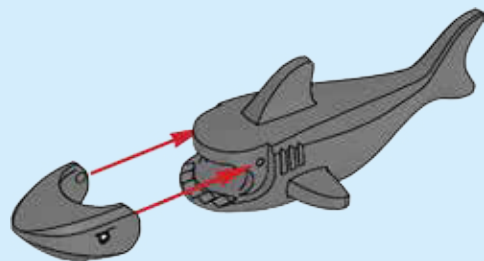
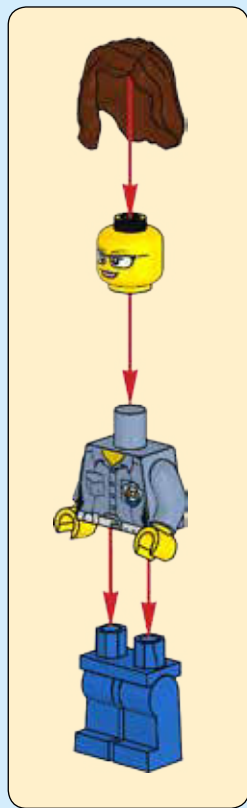


1





   2

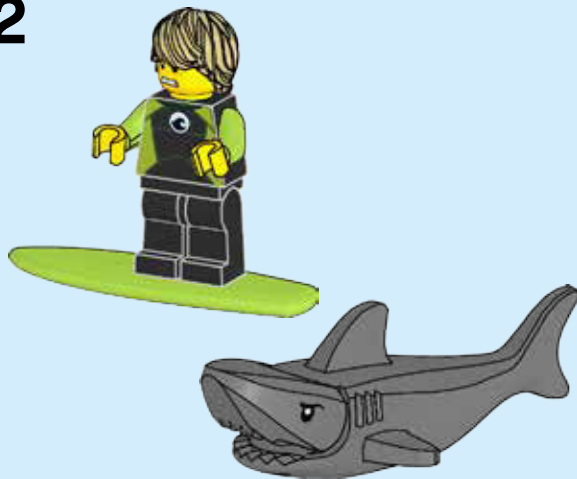


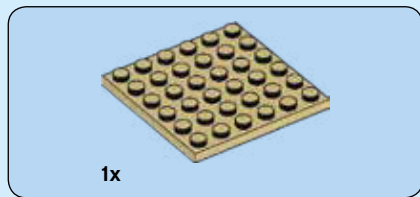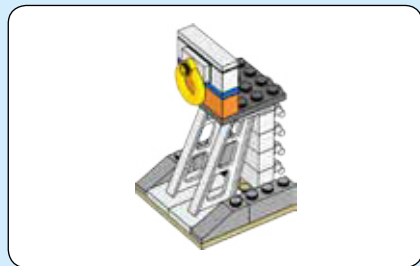

1

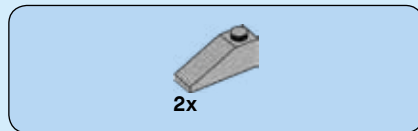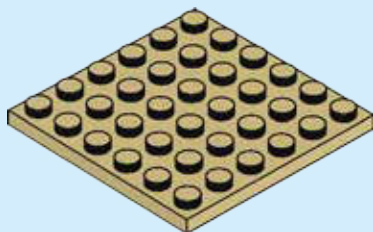  


2

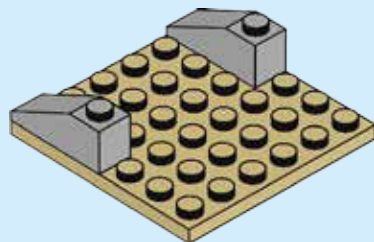 



2x

 3

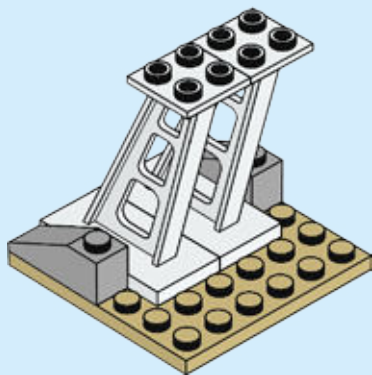


6




2x

 4

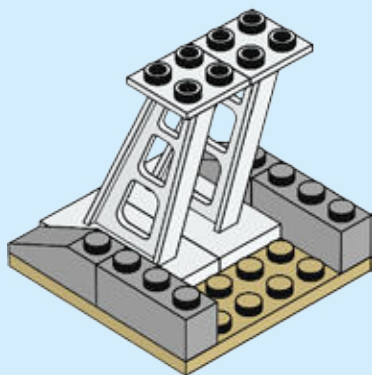

5x

 
5

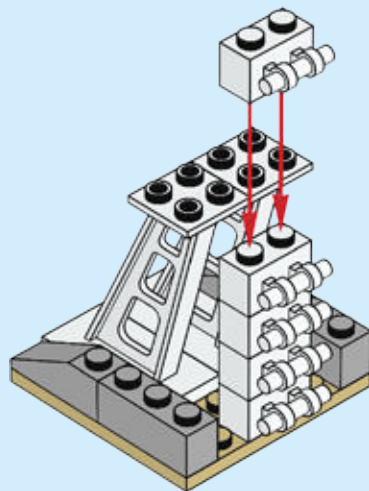



1x

 6

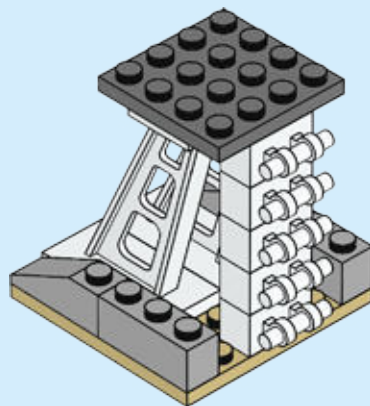




1x



2x



 1x



1x



1x



 
1x




1x

7


1

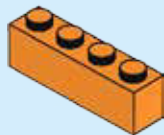


2

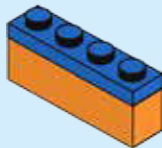 


3

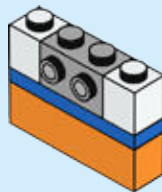 

4


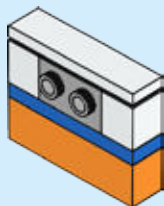 


5

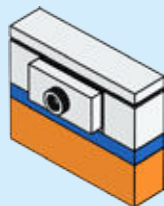 

6



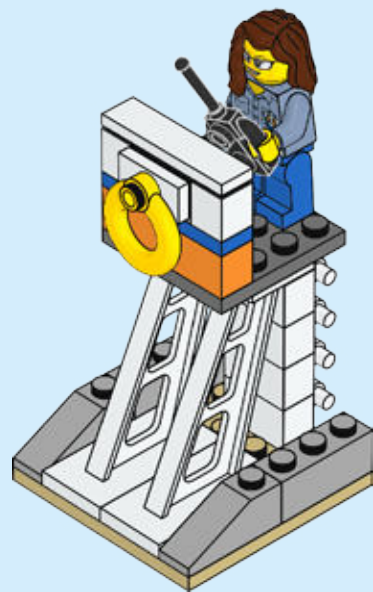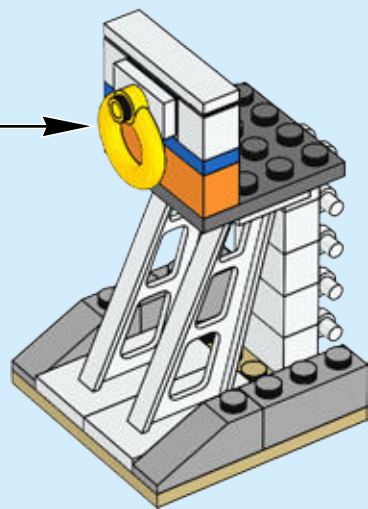  




1x

 
1






1x

 2

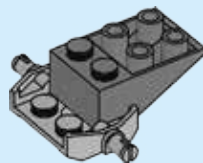

1x

 
3

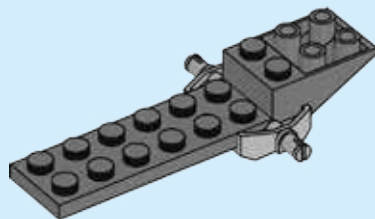




1x

  4

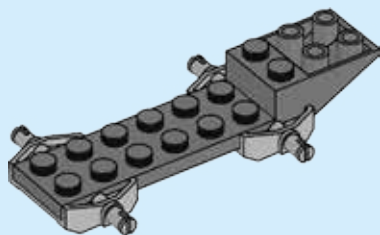




1x




1x

 5

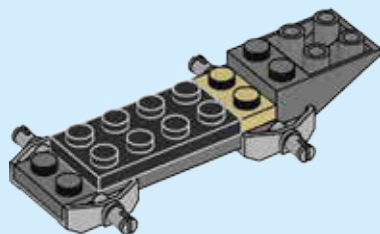


2x

 6

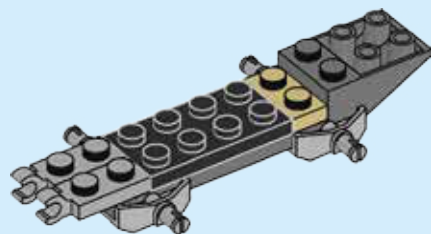




7

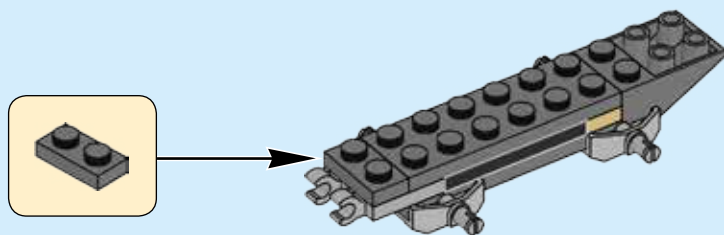 



1x

 8

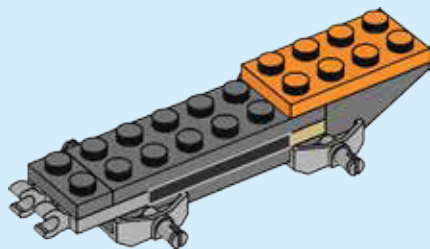



1x



1x

  
9

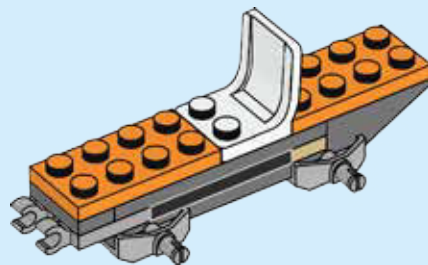

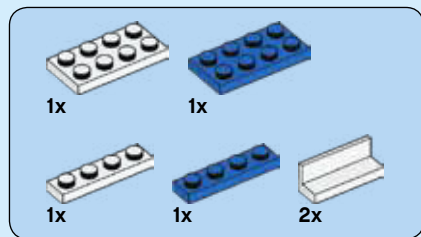

10

 
1

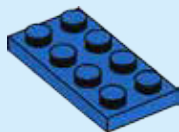

2




 
3

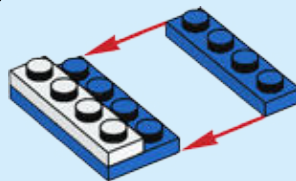

4



  5

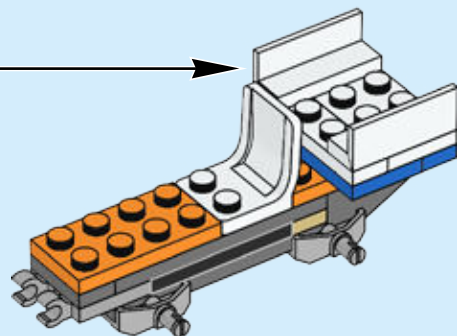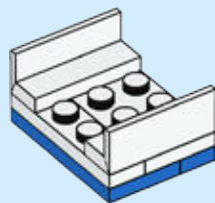




1x



1x

 11

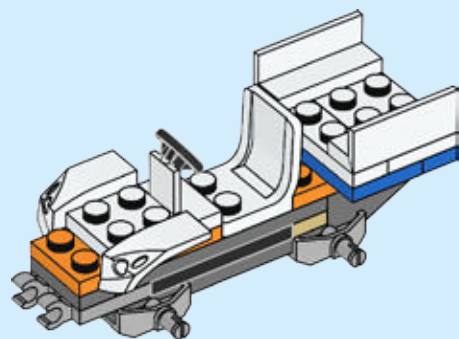


1x




1x

 12

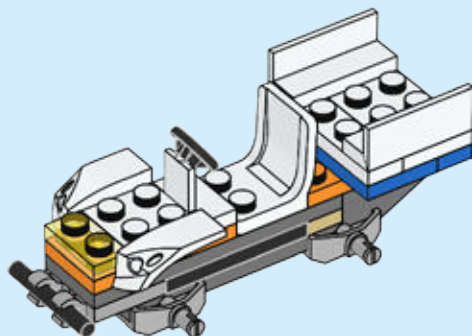




13

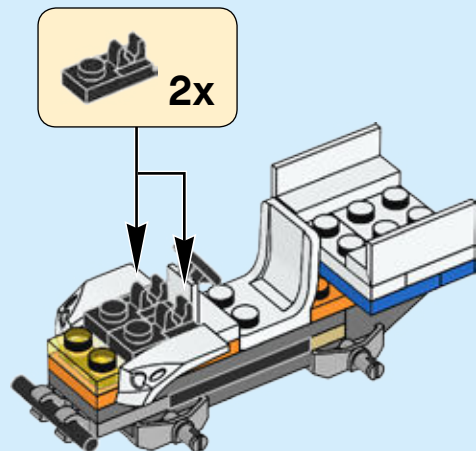 


14

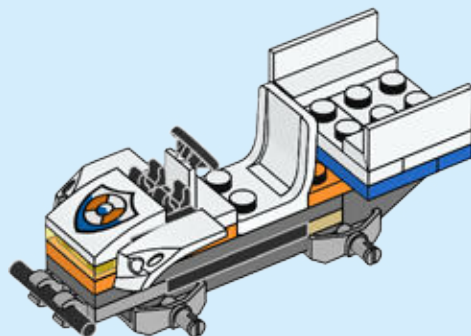 






1x

  15

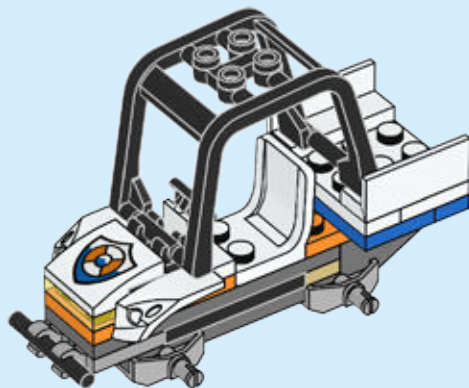

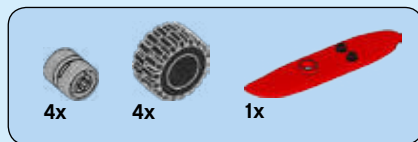

16

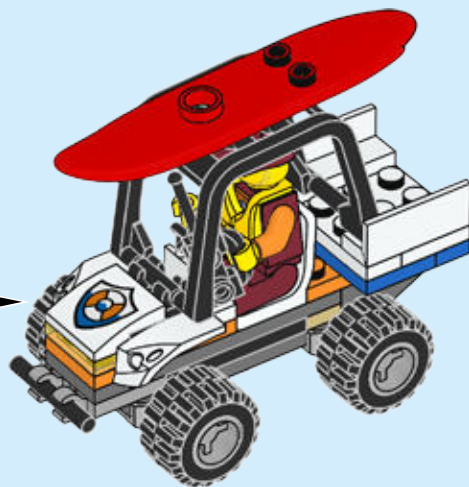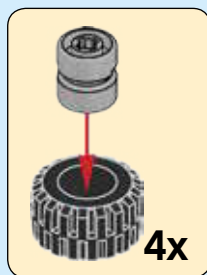  

2x
300501

1x
6051511

1x
9551

5x
4140626

1x
6183758

1x
407901

2x
6139694

1x
243101

1x
371001

1x
302001

1x
4297330

1x
6093519

2x
4142125

1x
4113917

1x
9341

2x
371023

1x
302023

1x
6182787

1x
4261572

1x
6153328

1x
4648281

1x
4527354

1x
6182699

1x
4194746

1x
6182771

1x
6182805

1x
6093525

2x
4598528

2x
6100054

1x
9339

4x
4568644

1x
302026

1x
4118827

2x
4158355

1x
6102964

1x
4541496

1x
4550736

4x
4211764

1x
6015344

2x
4535738

2x
4211428

2x
4211488

2x
4211569

1x
4211051

1x
4211063

1x
6107827

1x
4211064

1x
4243831

2x
4211002

1x
6044722

1x
4539385

1x
4125217

1x
6175655

1x
6102906



Customer Service
Kundenservice
Service Consommateurs
Servicio Al Consumidor
LEGO.com/service or dial

00800 5346 5555 :          

1-800-422-5346 :  